

- | | | | |
|-----------------|----------------------|---------------------|------------------------|
| 1 Power Plug | 2 Thermal Breaker | 3 Power Switch | 4 Operation Handle |
| 5 Pressure Knob | 6 Controller Display | 7 Swing-away Handle | 8 Heating Plate |
| 9 Silicon Mat | 10 Lower Plate | 11 Pull-out Drawer | 12 Quick-change Device |

User Tips

- Please hold the handle firmly when you are opening the heat press.
- Please make sure that machine is placed on a sturdy and even location
- Swing-away models need sufficient space, please make sure clear space from its right and the back .
- Maybe the machine you've carried is different from above drawing, i.e. with or without drawer. While the application is almost the same. Please contact us if you need any help.



Control Display

Turn on the power switch, control panel display illuminates like picture




P-1 TEMP. Setting Mode

Touch "SET" into "P-1", here you can set TEMP. with "▲" and "▼" reach to desired TEMP.



P-2 TIME Setting Mode

Touch "SET" into "P-2", here you can set TIME. with "▲" and "▼" reach to desired TIME.

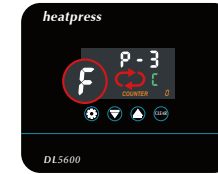

P-3 TEMP Scale Setting Mode

Touch "SET" into "P-3", here you can set TEMP. SCALE with "▲" and "▼" reach to desired SCALE.



P-4 Stand-by Mode

Touch "SET" into "P-4", here you can set stand-by time with "▲" and "▼" reach to desired value with range 0-120minutes. (0 refers to stand-by disabled)




Finally touch "SET" to complete all setting, so heat press start to heating up.



Stand-by Introduction

It reads OFF on the display and heat press starts to cool down. Stand-by only happens when machine is not in use and reaches to P-4 set minutes. If you want to use heat press, please wake up heat press by touch any button on the control display.

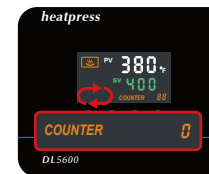

Counter Introduction

The control display counter increases one time after a circle of timing which helps you to record how many T-shirt you've transferred. If you want to clear up the number, please long hold the CLEAR button.

User Tips

- "OFF" on the controller display refers to AUTO-OFF, you can press any button to wake the machine.
- CLEAR on the control panel is the clearing button to refresh the COUNTER.